



Safety Ground is not fully drawn here but must be used on:

- * Each EE12 cover plate. (Connection is on EE 12 board)
- * Deck Plate
- * Chassis at mains entrance
- * All switch metal parts (or connect to deck plate)